



IdeaPad Yoga 13 Hard Drive Replacement

Replace your damaged hard drive to restore normal computer operations.

Written By: Jacob Ennis





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Keyboard




- ❗ Power off your laptop before beginning disassembly.
- Open the laptop to locate the keyboard.

Step 2




- Insert a plastic opening tool in the seam between the keyboard and laptop body.
- Carefully run the tool around the top and sides of the keyboard to pop out the 9 tabs holding in the keyboard.


Step 3

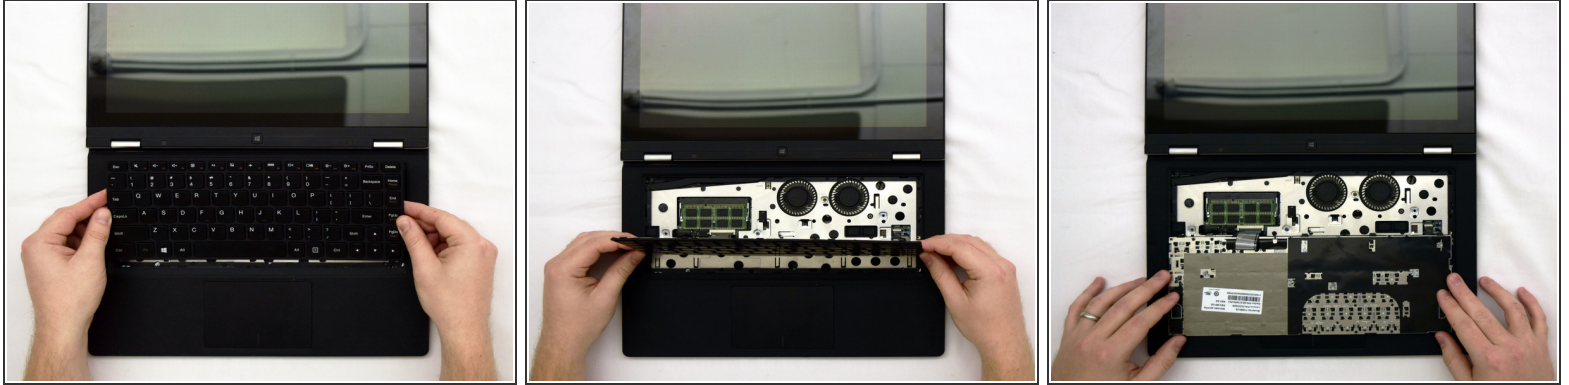


- Lift the keyboard up, then pivot it towards you to lay it facedown on the trackpad and palm rests.


 Be careful when lifting the keyboard up. The ribbon cable connecting it to the motherboard is very short, and the connector is fragile.

Step 4

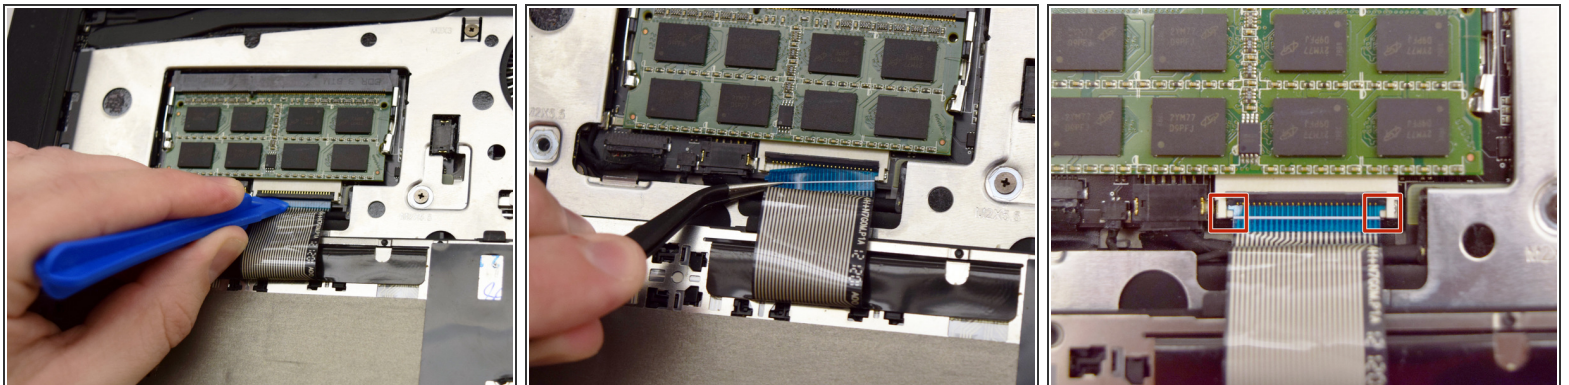


- Locate the ribbon cable connecting the keyboard to the motherboard.
 - Use the tip of the opening tool to lift the black flap on the connector.
 - With the tweezers, gently lift the ribbon cable out of the connector.
-  Be careful when reinserting the ribbon cable.
- Ensure the cutouts on the end of the cable match the tabs on the connector.

Step 5 — Keyboard Bezel

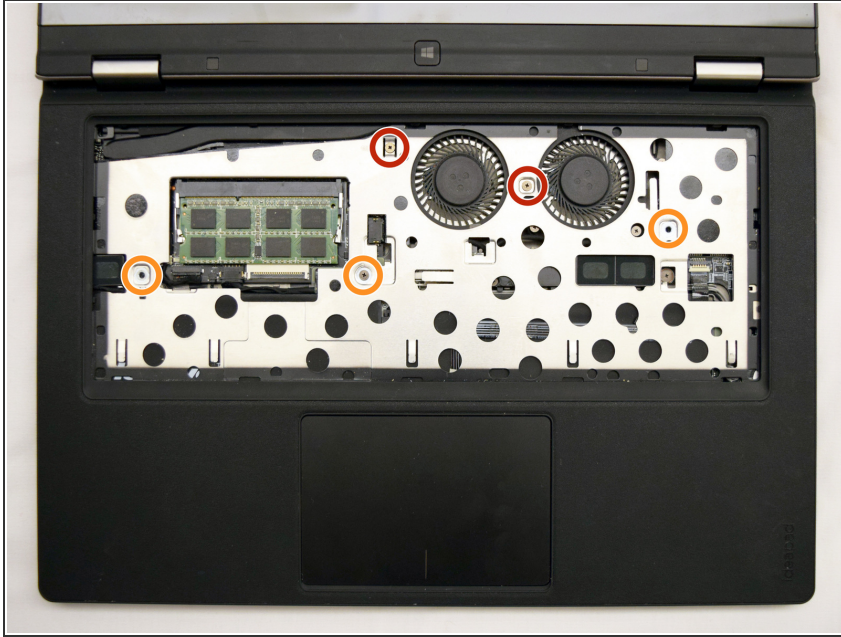



- Locate and remove the screws holding the bezel to the laptop body:
 - Two 3 mm Phillips screws
 - Three 5.5 mm Phillips screws


Step 6

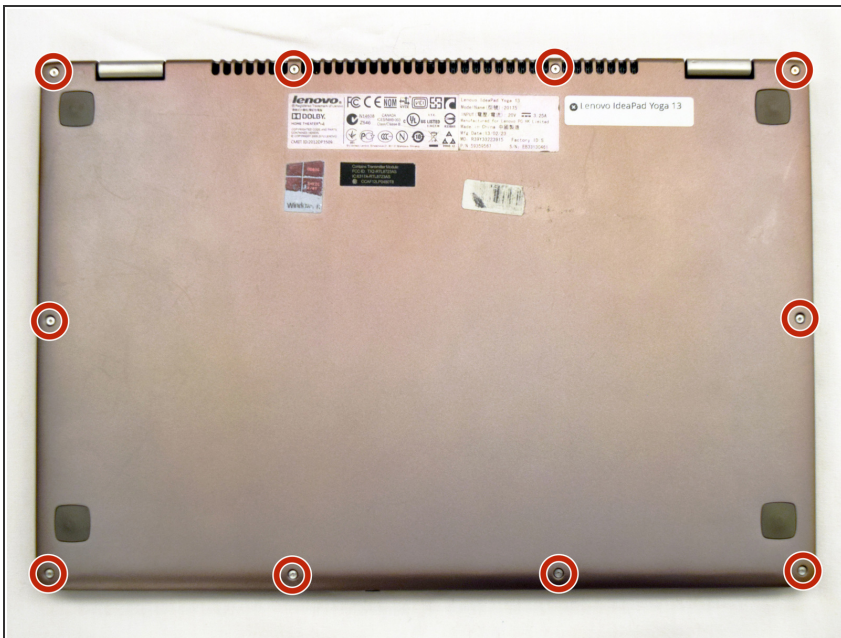


- Flip the laptop over.
- Locate and remove the screws holding the bezel to the bottom panel:
 - Ten 4.5 mm Phillips screws


Step 7

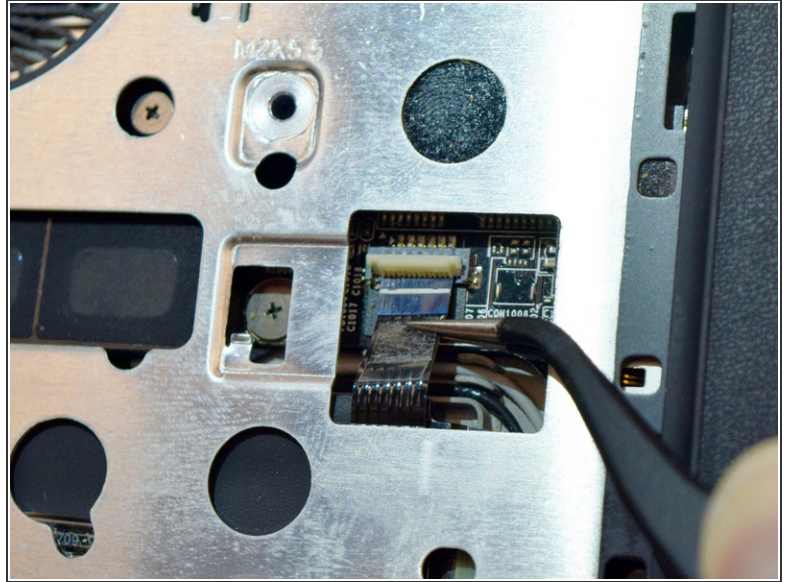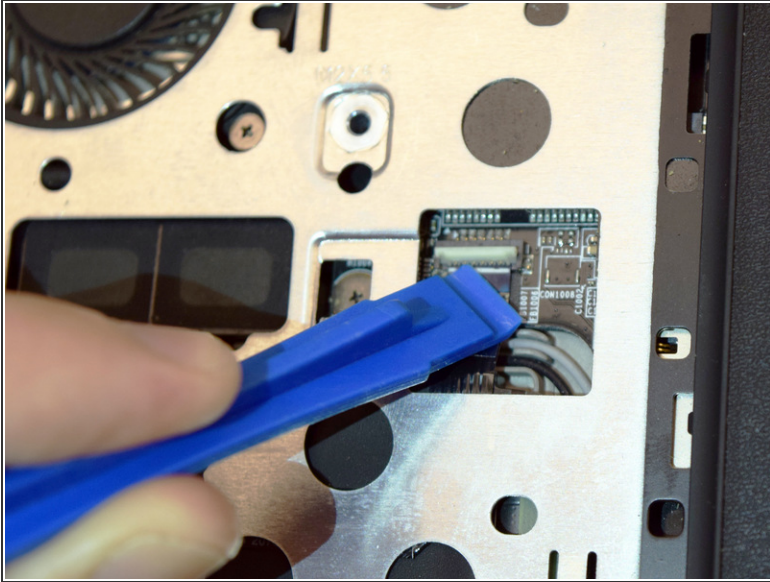

 There is now nothing securing the bezel to the laptop body. However, there are still two cables connecting the bezel to the mainboard. Ensure the bezel remains in place until the cables are disconnected.


- Flip the laptop back over.
 - Locate the small trackpad ribbon cable and use the opening tool to lift the black flap on the connector.
 - With tweezers, gently pull the ribbon cable out of the connector.
-  You can use the clear plastic tab on the top of the ribbon connector to help pull the cable out.

Step 8

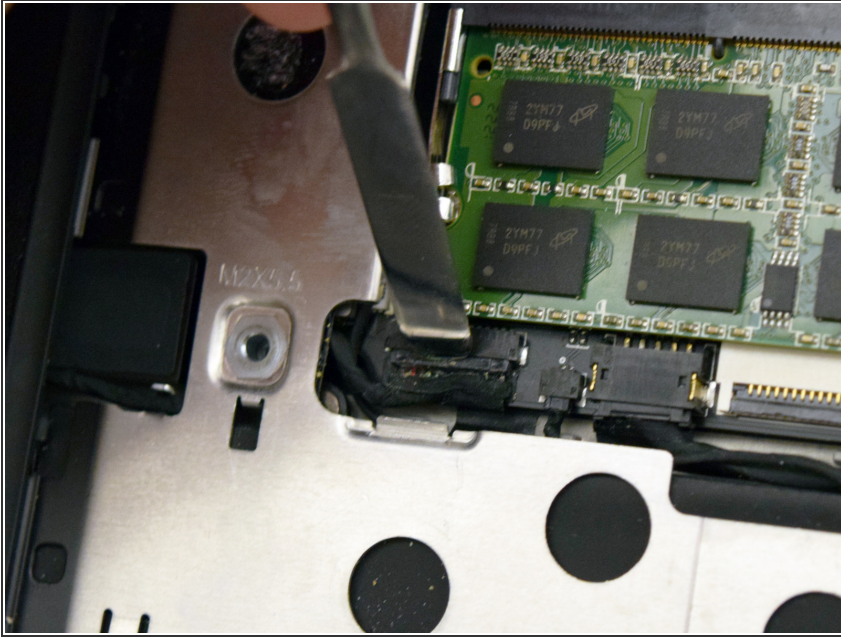


- Locate the power board cable and disconnect it by pulling the cable head towards the front of the laptop.
- ⓘ You can use a metal spudger to push the head out of the socket.
- ⚠ Be careful to not damage the socket.

Step 9

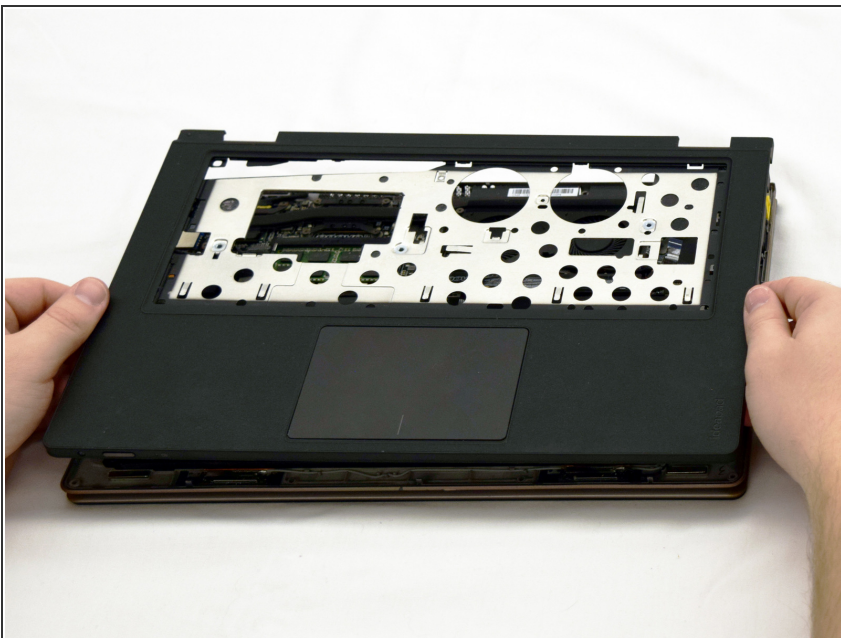


- Lift the keyboard bezel off the laptop.
- ⓘ You may need to flip the screen around to get the necessary clearance at the hinges.

Step 10 — Battery

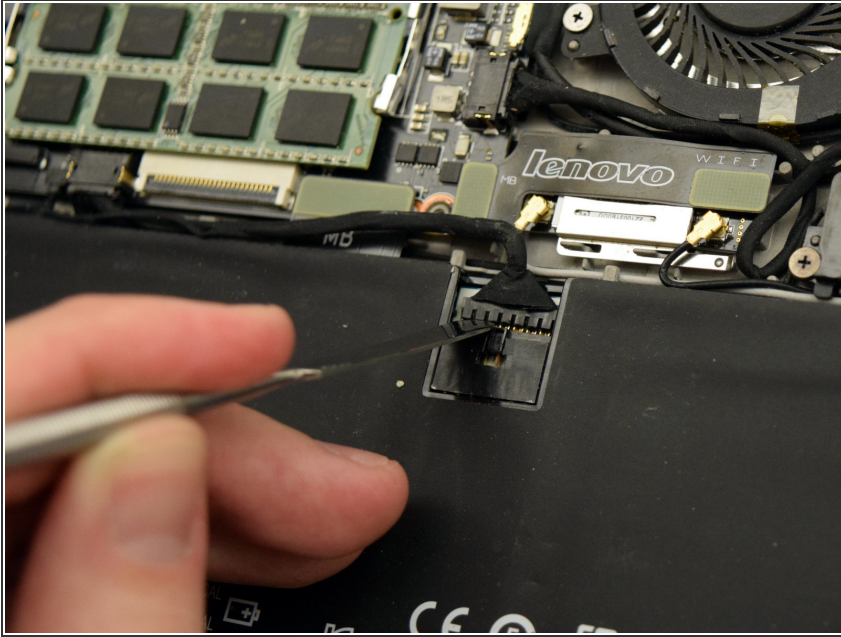


- Unplug the battery cable.
- ① You can use a metal spudger to push the head out of the socket.

Step 11

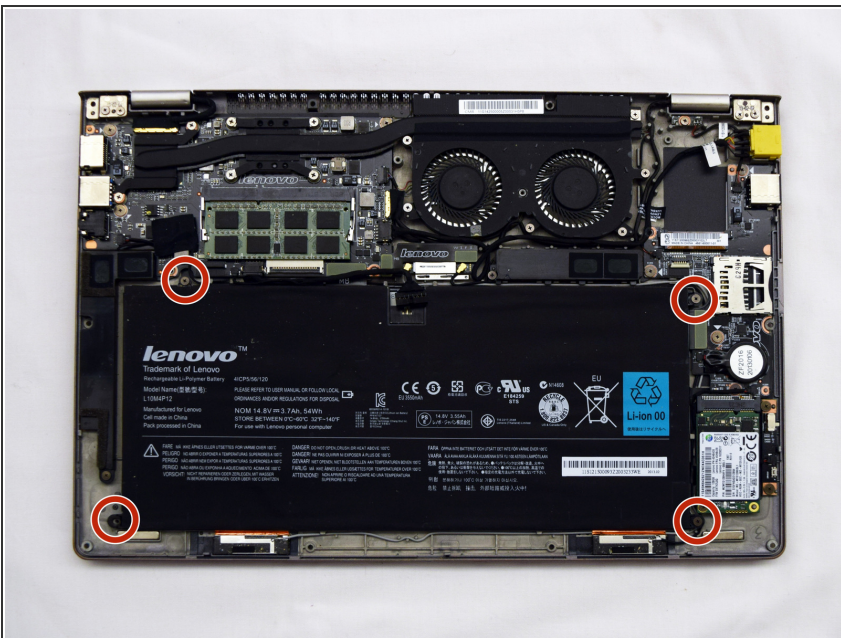

- Remove the screws holding the battery to the chassis:
- Four 4 mm Philips screws

Step 12

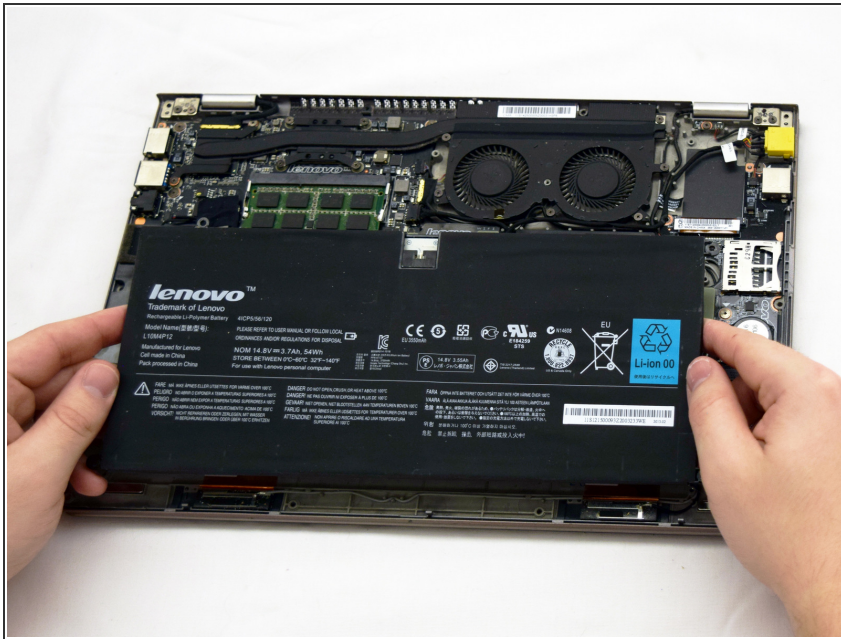

- Gently lift the battery out of the laptop.


⚠ Handle the battery carefully. Do not allow it to bend or be punctured.

Step 13 — Hard Drive



- Locate and remove screw that is holding down the SSD card:
- One 3 mm Phillips screw

Step 14

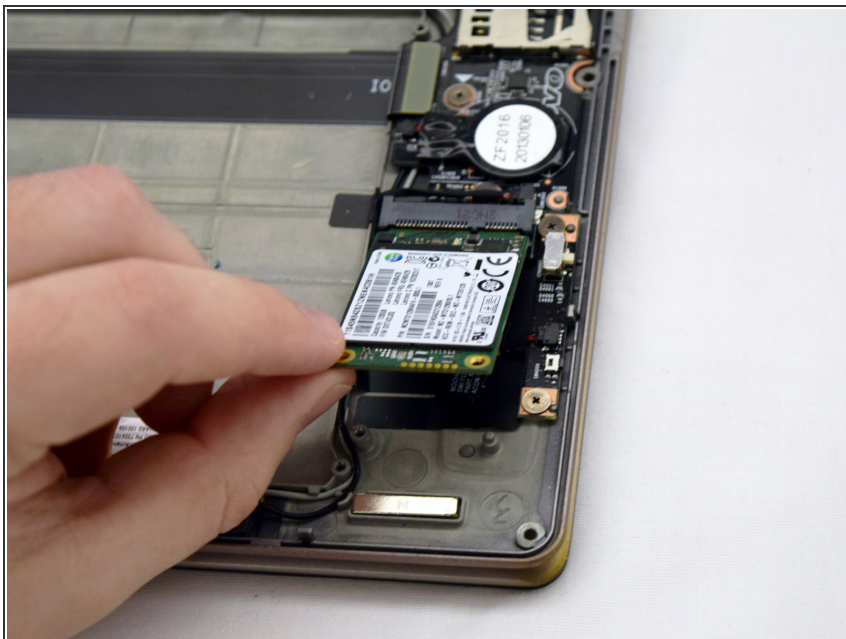

- Lift up on SSD card and remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 12:35:14 PM.